


JetiBox – short manual

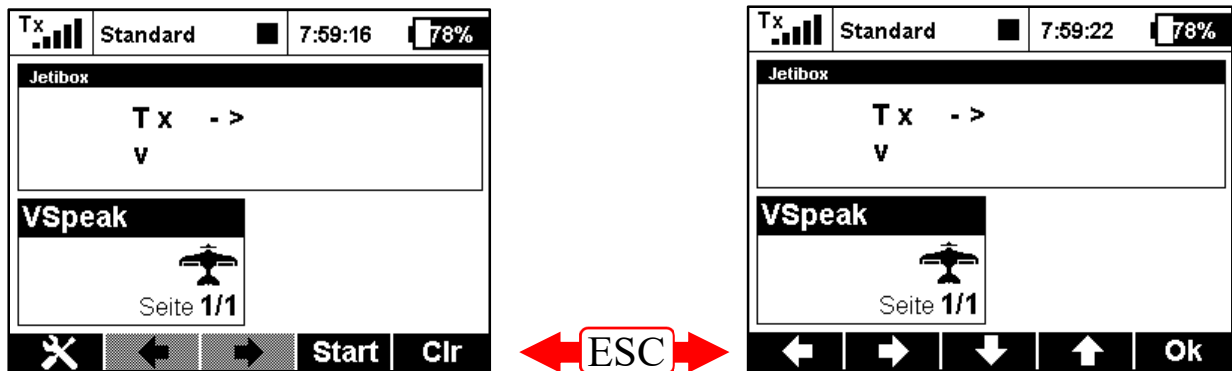


How do I get to the settings of Jeti sensors on my Jeti remote control transmitter using the JetiBox emulation?


First of all, a JetiBox must be displayed on the transmitter display, which is done by selecting it in the menu: **Timers/Sensors -> Displayed Telemetry -> (function key) Add**

The activation / switching of the function keys as JetiBox keys is done with the **ESC**-button.



Each time the transmitter is switched on, the display of the JetiBox **always** starts as shown above

Accepted keystrokes: -> 
v 
<- 

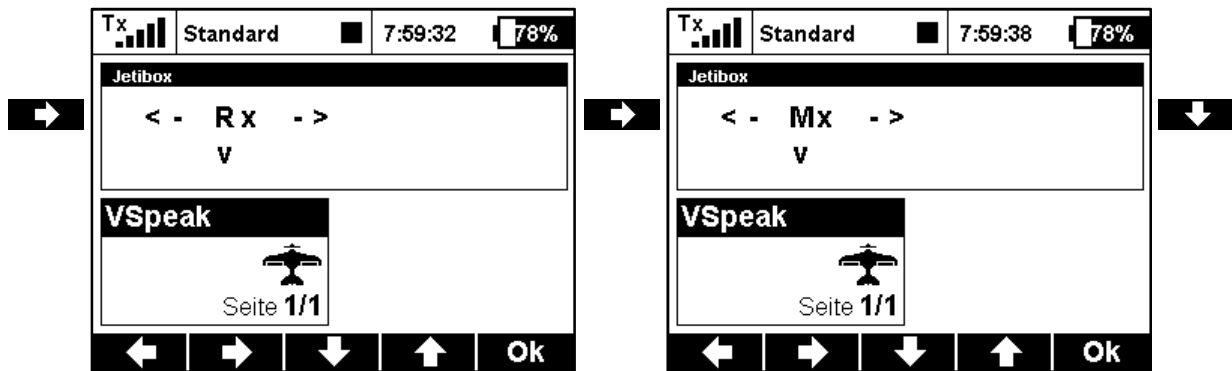

With 2 x  you get to the "Mx" menu, 1 x  and you are in the menu of the Jeti sensor.

signification: Tx ... Transmitter settings
Rx ... Receiver settings
Mx ... Module (sensor-) settings

When **the receiver is turned off**, the Rx and Mx settings are not selectable as shown in the following pictures (v is missing):

